

# Basler Accessories



## Technical Specification

### **POWER CABLE HRS 6P/OPEN**

#### **Order Numbers**

**2000029758**

Document Number: AW001132

Version: 02 Language: 000 (English)

Release Date: 22 January 2015

## **Contacting Basler Support Worldwide**

### **Europe**

Basler AG  
An der Strusbek 60-62  
22926 Ahrensburg  
Germany

Tel. +49 4102 463 515  
Fax +49 4102 463 599

[support.europe@baslerweb.com](mailto:support.europe@baslerweb.com)

### **The Americas**

Basler, Inc.  
855 Springdale Drive, Suite 203  
Exton, PA 19341  
USA

Tel. +1 610 280 0171  
Fax +1 610 280 7608

[support.usa@baslerweb.com](mailto:support.usa@baslerweb.com)

### **Asia**

Basler Asia Pte. Ltd.  
35 Marsiling Industrial Estate Road 3  
# 05 - 06  
Singapore 739257

Tel. +65 6367 1355  
Fax +65 6367 1255

[support.asia@baslerweb.com](mailto:support.asia@baslerweb.com)

[www.baslerweb.com](http://www.baslerweb.com)

**All material in this publication is subject to change without notice and is copyright  
Basler AG.**

Order Number	Description	Applicable Cameras
2000029758	Power Cable with HRS 6-pin connector and open end, 10 m	aviator CL, racer, runner

Table 1: Cable Type

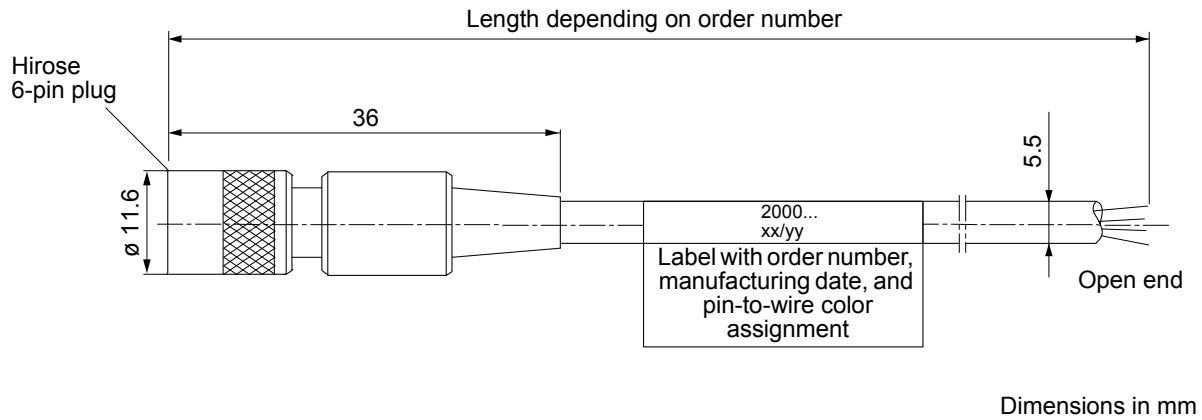


Fig. 1: Cable Overview

### Wiring Information

Pin Number	Wire Color	Function
1	Brown	Camera Power
2		Camera Power
3		Not connected
4		Not connected
5	White	Camera Power Ground
6		Camera Power Ground

Table 2: Wiring Information

For more details, see the respective camera user's manual.

## Physical Specifications

Camera-Side Connector	Hirose, 6 pin [HR10A-7P-6S (73)]
Host-Side Connector	None, open end
Cable Cross-Section	2 x 2 x 0.5 mm <sup>2</sup> (close to AWG 21)
Cable Diameter	5.5 mm
Wire Insulation	PVC
Outer Jacket	PVC
Minimum Bending Radius	27.5 mm (5 x cable diameter), fixed installation
Maximum Bending Cycles	None (fixed installation only)
Suitable for Drag Chain Applications	No
Suitable for Robotics Applications	No

Table 3: Physical Specifications

## Electrical Specifications

Maximum Operating Voltage	See camera user's manual
Wire Resistance	≤ 250 Ω/km

Table 4: Electrical Specifications

## Environmental Specifications

Operating Temperature Range	-25 °C - +80 °C (not moving)
-----------------------------	------------------------------

Table 5: Environmental Specifications

## Plug Specifications

Durability	> 1000 mating cycles
Contact Resistance	max. 10 mΩ
Contact Plating	Silver
Protection Rating	IP40
Plug Insulation Material	Polyamide/PBT

Table 6: Plug Specifications

## General Information

RoHS Compliance	Yes
CE Conformity	Yes (RoHS)
UL Conformity	No
Warranty	1 year

Table 7: General Information



The cables are intended for use with the cameras specified in [Table 1](#) only.

Read the camera user's manual including the safety warnings before connecting the cable to the camera. The user's manual also contains further information about pin assignments, power requirements, as well as comprehensive information about installing and using the camera.

You can download the user's manual and related documents for your camera free of charge from the Basler website: [www.baslerweb.com](http://www.baslerweb.com).

## Revision History

Doc. ID Number	Date	Changes
AW00113201000	24 Nov 2011	Initial release of this document.
AW00113202000	22 Jan 2015	New cover photo. Changed the layout of the document. Added technical specifications in tables <a href="#">Table 2</a> to <a href="#">Table 7</a> .