
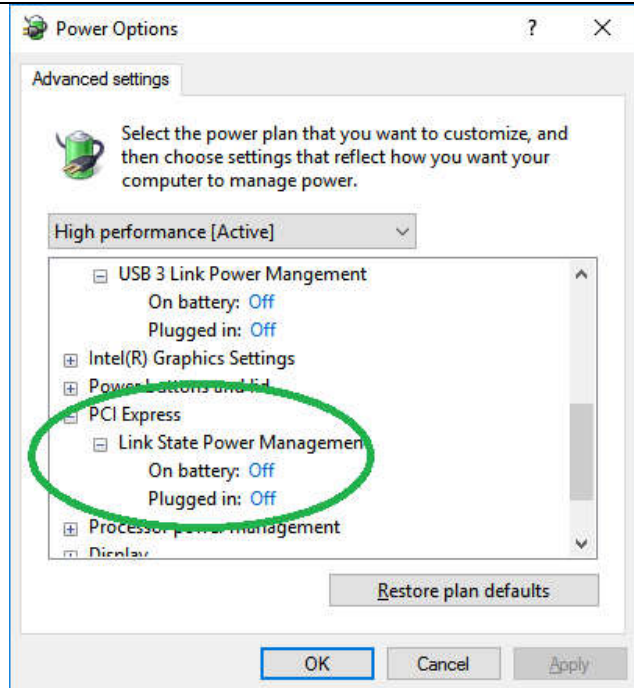
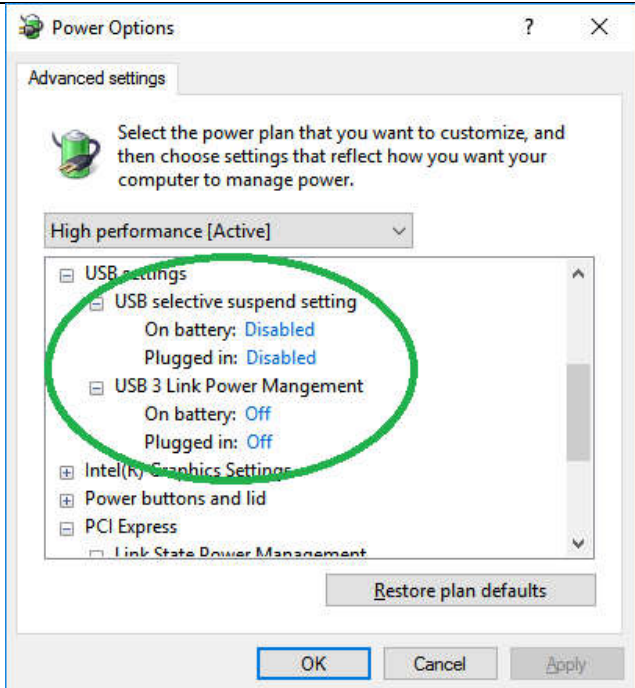
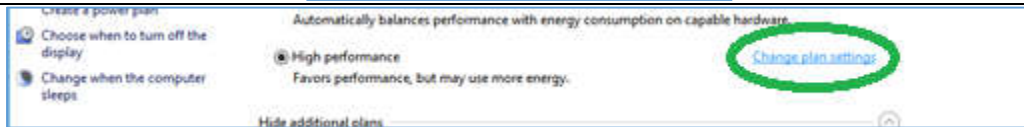


Recommended Windows Power Saver Settings for USB Cameras (Page 1 of 2)


First, turn off power saving settings in the Windows Power Plan
You may have all or only some of the settings below. Turn off what is available.

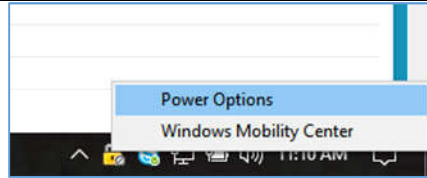


Recommended Windows Power Saver Settings for USB Cameras (Page 2 of 2)

Now turn off the power saving settings for the USB hubs and Controller cards used by the camera.


1. Find the camera in Windows Device Manager and then select View→Devices by Connection

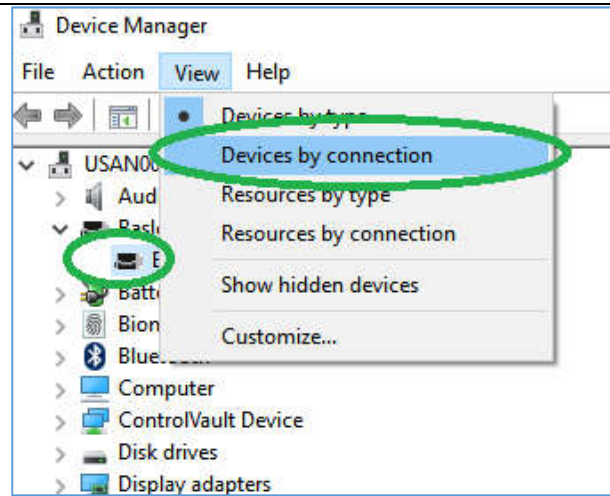

2. Right click on the hub/controller that the camera is connected to, and go to the properties.

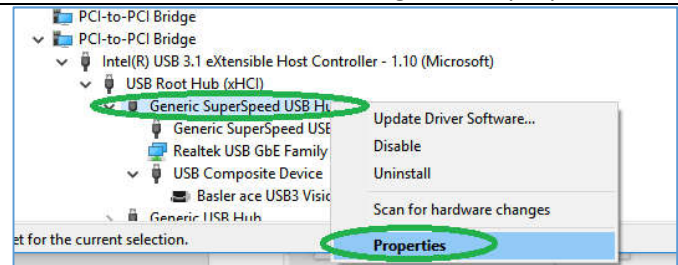

3. Uncheck "Allow the computer to turn off this device..."

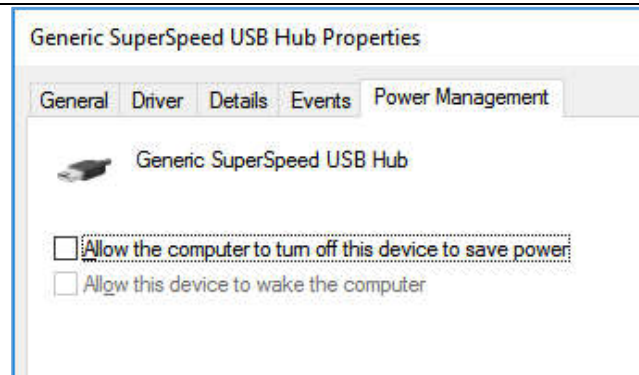

4. Repeat for any other hubs/controllers in the hierarchy of the camera.

